


KitchenAid®

GAS RANGE

MODELS:

KFGG500EBS8 (Black Stainless)


COOKTOP PARTS

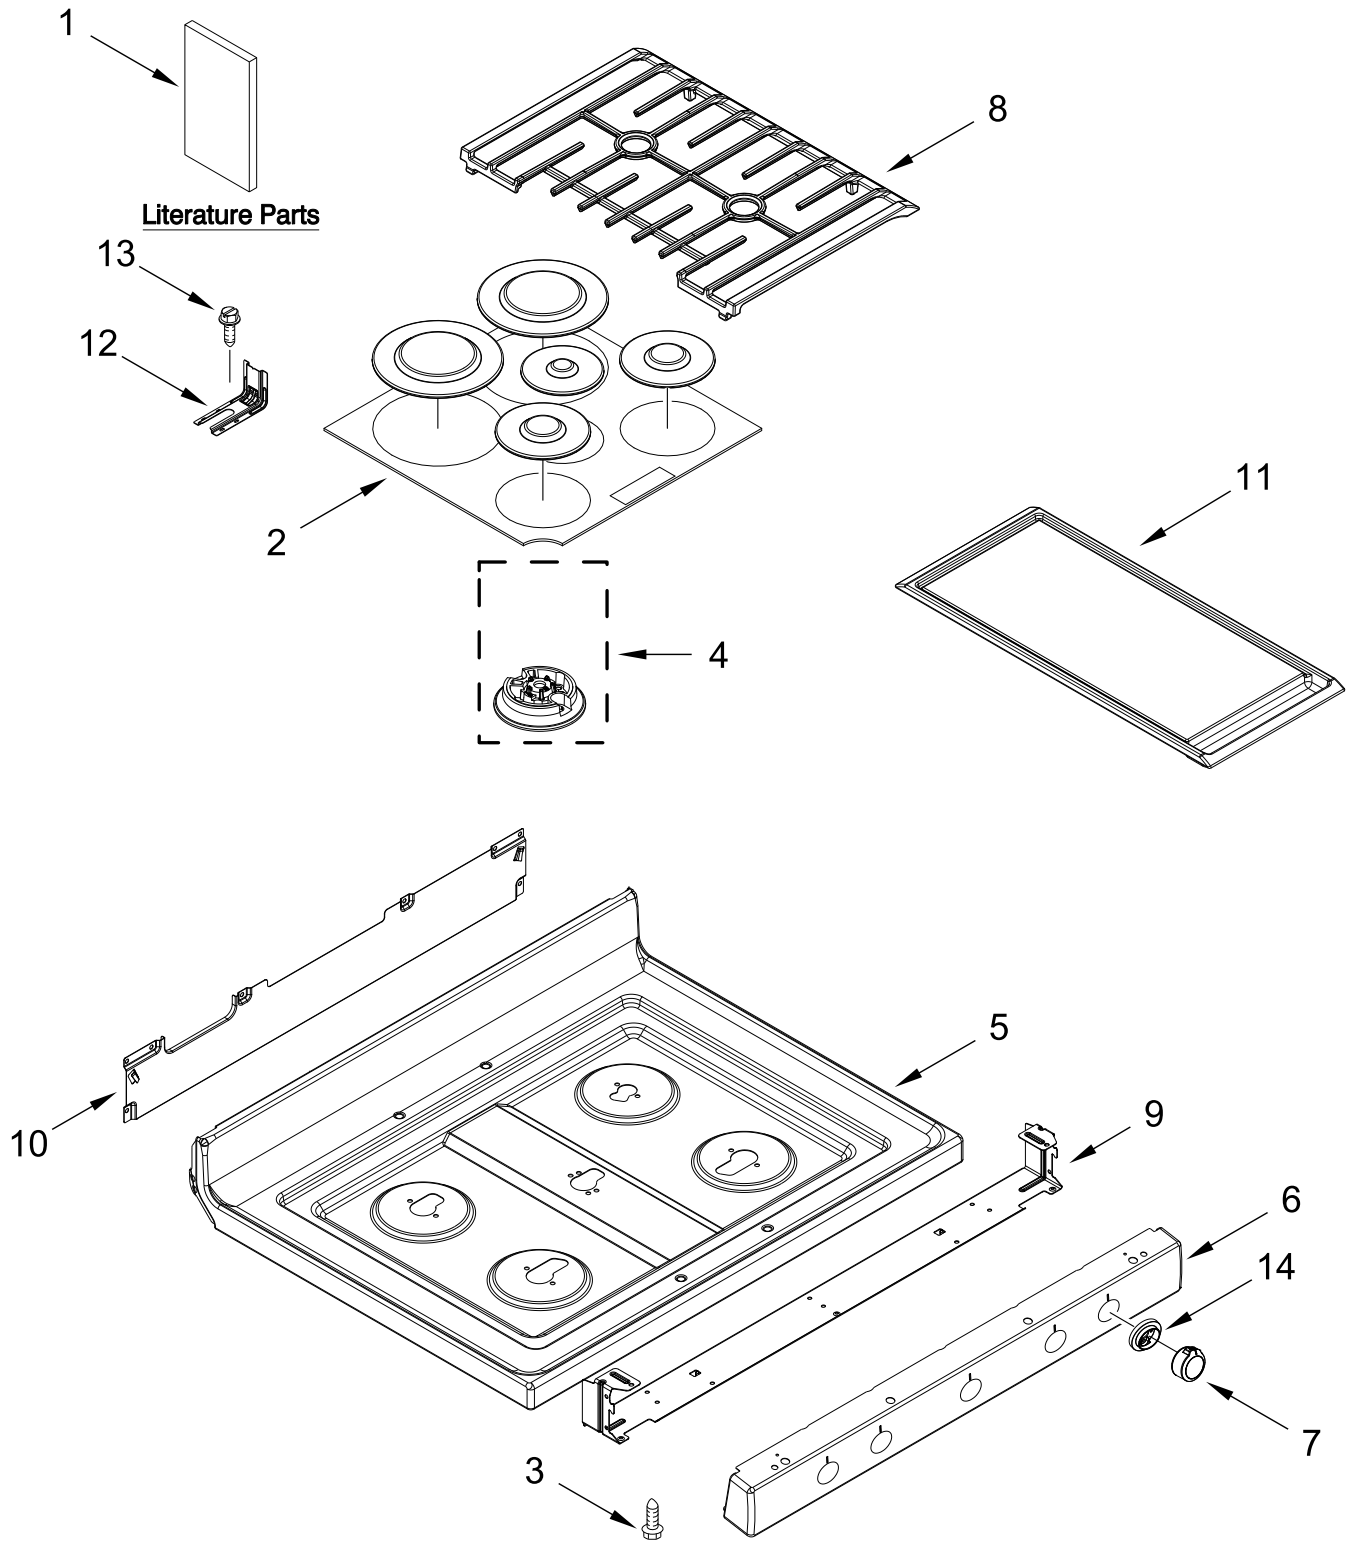

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6		Panel, Manifold	14		Bezel
	W11426598	Owners Manual		W10861036	Black Stainless		W10785119	Stainless (Kit of 5)
	W11565451	Tech Sheet	7		Knob			FOLLOWING PARTS NOT ILLUSTRATED
	W11427469	Quick Start Guide		W10786063	Stainless			
2		Burner Cap Kit	8		Grate Kit		W11461074	Harness, Main
	W11369523	Black (Set of 5)		W11241658	Black (Set of 2)		W10753750	Harness, Bake and Broil
3	W10067840	Screw	9	W11379946	Manifold Panel Bracket			
4	W11352018	Spreader, Flame (Left Front and Right Front)	10	W11379358	Rear Gas Cooktop Bracket		W10334923	Clip, Gas Wiring
	W11352020	Spreader, Flame (Left Rear and Center)	11	W10432544	Griddle		313438	Clip, Harness
	W11352021	Spreader, Flame (Right Rear)	12	W11379945	Bracket, Anti-Tip		3196520	Clip, Wire
		Cooktop	13	7101P485-60	Screw, Anti-Tip Kit		W10182767	Tie, Manifold Wire
5	W11418086	Black					3196896	Clip, Wire


CONTROL PANEL PARTS

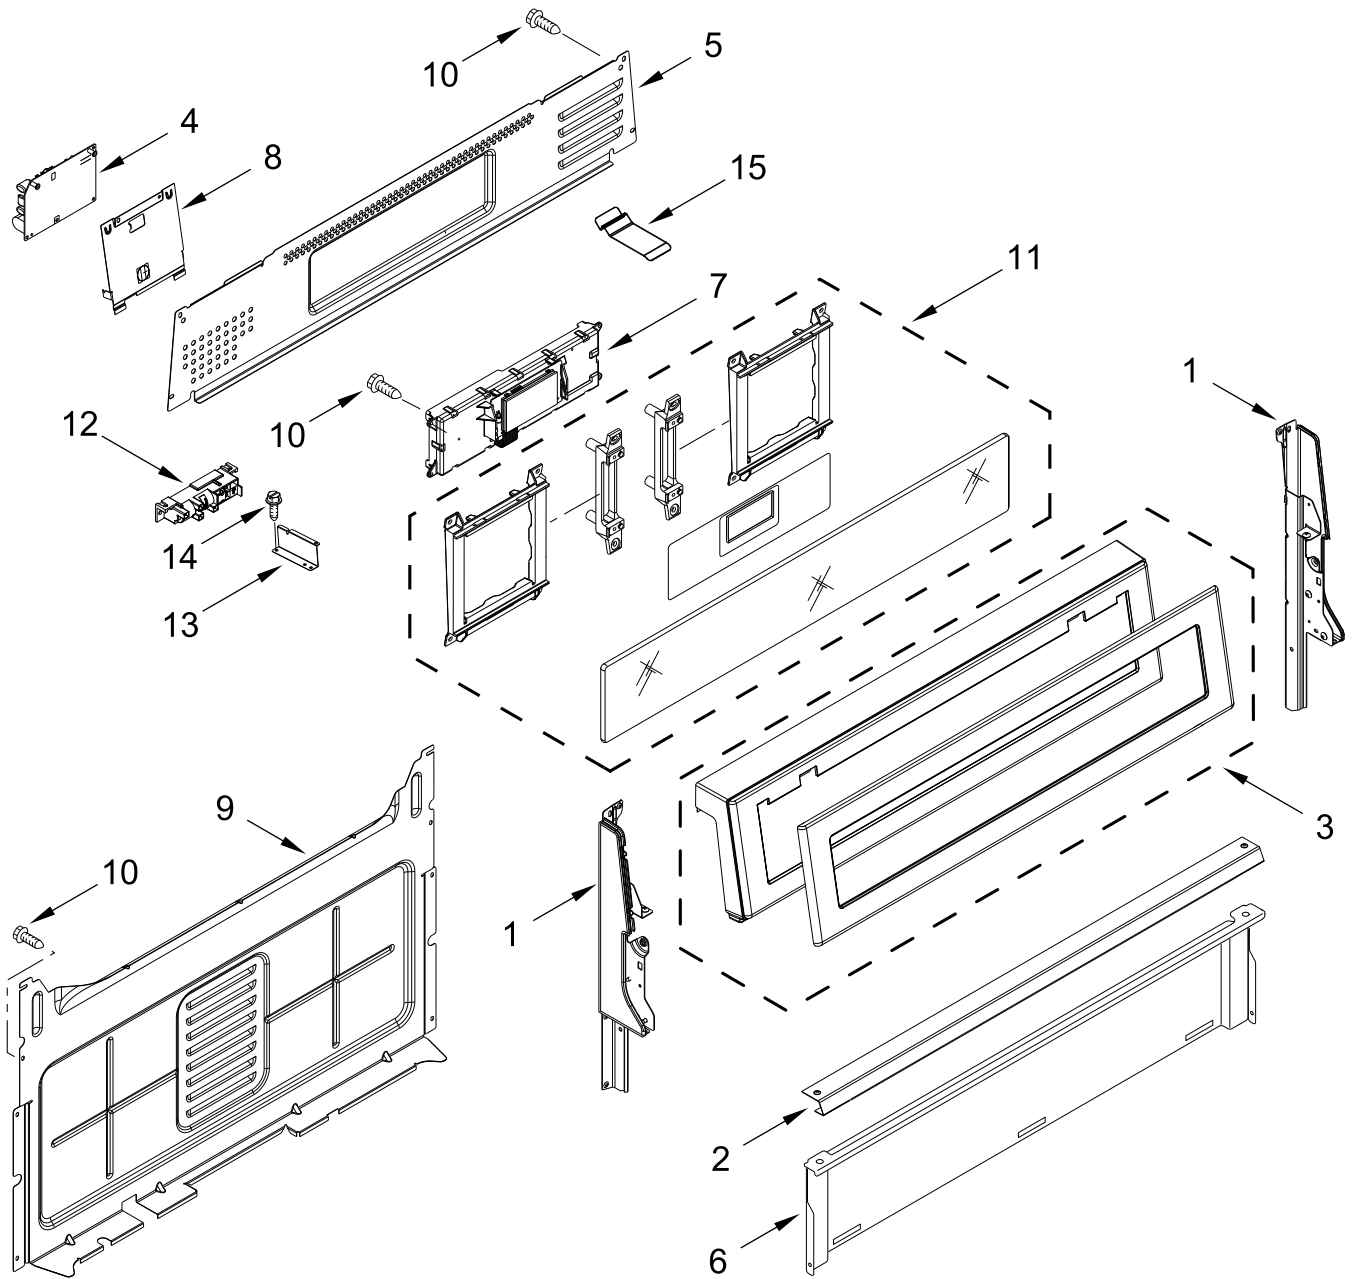

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10198745	Cover, Upper	11		Assembly, Active Overlay
	W11130372	Black (Left)	6	W10192841	Shield, Heat		W10692150	Black
	W11130379	Black (Right)	7	W11642873	Control (Maxwell)	12	W11350452	Spark Module
2	W10516123	Bracket, Console Mounting	8	W10762981	Bracket, Mounting	13	W10797001	Bracket, Ignitor
3		Console	9	W10184251	Cover, Back	14	3196169	Screw
	W11024860	Black Stainless	10	3196178	Screw	15	W10551614	Spreader, Clip-Spring
4	W10920631	Module, Spark DSI						


CHASSIS PARTS

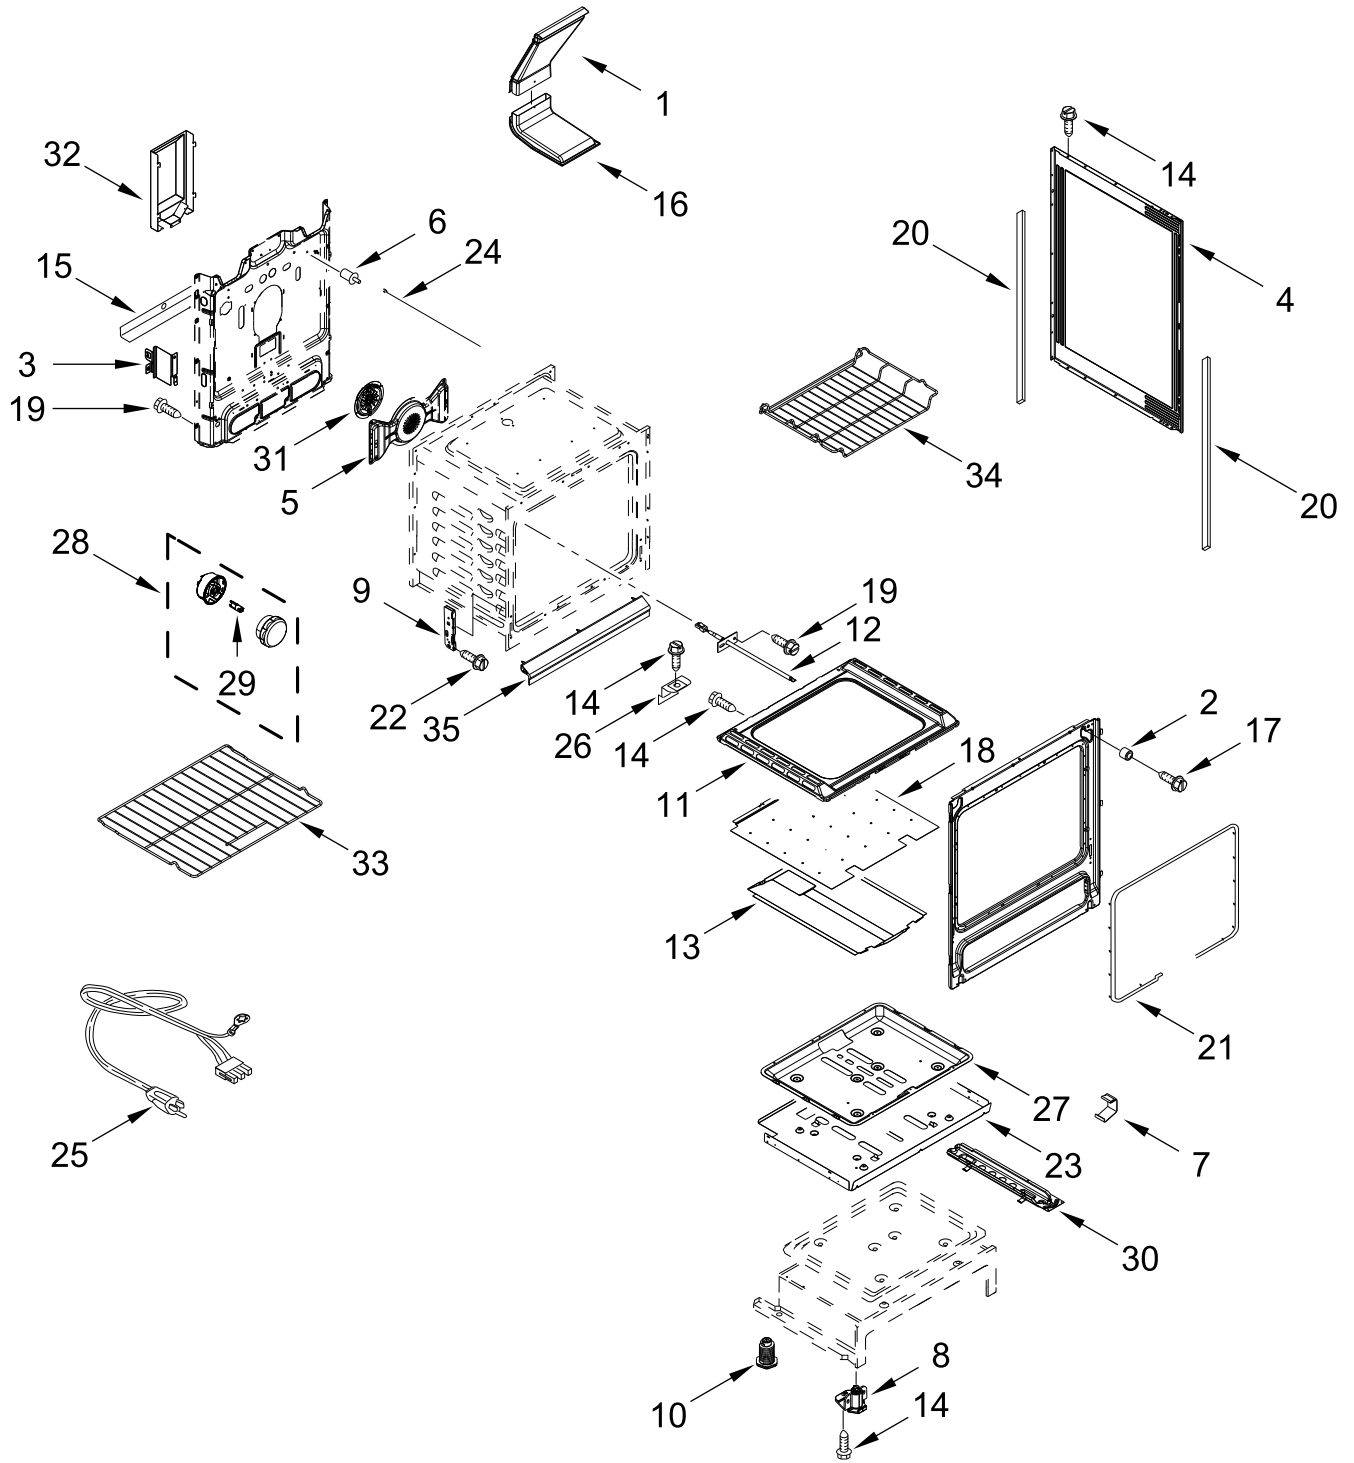

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10314347	Assembly, Flue	17	3196560	Screw	31	W10874067	Motor, Fan (Convection)
2	9758701	Spacer, Door	18	W10323077	Diffuser, Flame	32	W10158780	Cover, Rear Fan
3	W10273002	Bracket, Oven Support	19	3196178	Screw	33	W10531060	Rack, Oven
4		Panel, Side	20	W10919715	Gasket	34	W10289145	Rack, Oven (Gull-Wing)
	W10162245	Black	21	W11491752	Gasket, Door	35	W10501599	Clip, Front Frame Cover
5	W10346153	Baffle, Full Convection	22	W10031780	Screw			FOLLOWING PARTS NOT ILLUSTRATED
6	W11511828	Switch, Door	23	W10273195	Shield, Heat		W10526208	Insulation, Wrap
7	W10137382	Clip, Panel	24	W10273192	Rod, Door Switch		W10526209	Insulation, Main Back
8	W10341186	Front Foot Assembly	25	W10910642	Cord, Power		4820F015-59	Insulation, Strap
9	W10289077	Receiver, Hinge	26	W10035900	Support, Oven Bottom			
10	W10058460	Foot, Leveling	27	W11379356	Pan, Bake			
11	W10211368	Bottom, Oven	28	W11634772	Light Assembly			
12	W10586204	Sensor	29	W10571723	Bulb, Halogen 40 Watts			
13	3601P356-45	Baffle, Bake Burner	30	W10390008	Base Rail Assembly (Left)			
14	W10362924	Screw		W10390007	Base Rail Assembly (Right)			
15	W10435470	Brace, Main Back						
16	W11040249	Assembly, Flue (Upper)						


MANIFOLD PARTS

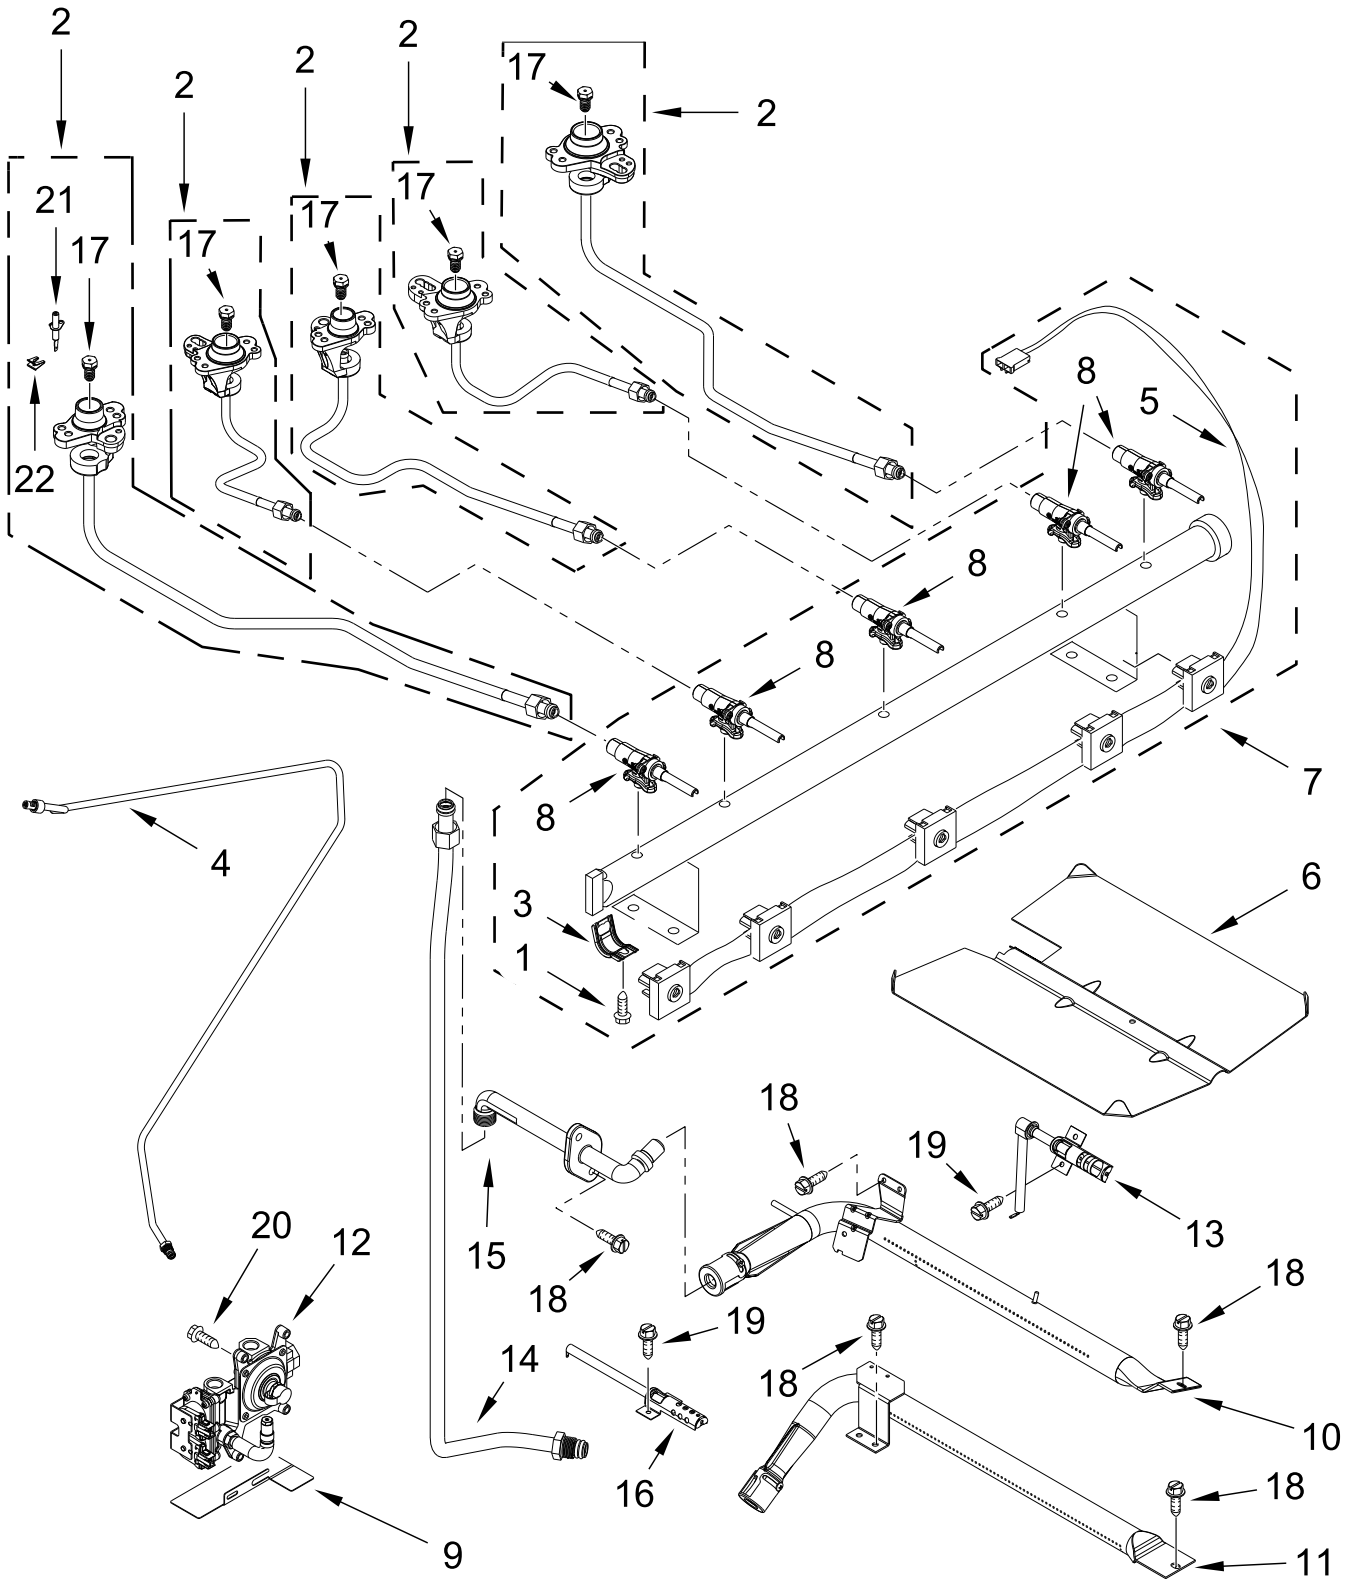

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	9	W10224921	Bracket, Aegis	22	W10827923	Electrode, Spring
2	W11459263	Orifice Holder Assembly (18K)	10	W10439242	Burner, Broiler			FOLLOWING PARTS NOT ILLUSTRATED
		(Left Front)	11	W10680035	Burner, Bake		W11489399	LP 5 Orifice Conversion Kit
	W11459258	Orifice Holder Assembly (9.5K)	12	W10720102	Valve, Gas		W10566535	LP Conversion Kit (Bake and Broil)
		(Left Rear)	13	W10324262	Igniter, Bake			
	W11459260	Orifice Holder Assembly (15K)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)			
		(Right Front)	15	W10776437	Fitting, Broil			
	W11459259	Orifice Holder Assembly (5K)	16	W10333842	Electrode, Broil			
		(Right Rear)	17	W11485988	Orifice (18K)			
	W11459261	Orifice Holder Assembly (8K)		W11485873	Orifice (9.5K)			
		(Center)			(Left Rear)			
3	W10295996	Bracket, Saddle Valve		W11485872	Orifice (15K)			
4	W10510125	Tubing, Main Supply			(Right Front)			
5	W10811693	Harness, Switch Spark		W11485871	Orifice (5K)			
6	3601P336-45	Baffle, Broil Burner			(Right Rear)			
7	W11347746	Manifold Assembly	18	W10362924	Screw			
8	W10566062	Valve, Gas (Left Front, Right Front)	19	3196385	Screw			
			20	3400016	Screw			
	W10566057	Valve, Gas (Left Rear, Center)	21	W11428831	Electrode (Left Front, Left Rear, Center)			
				W11428858	Electrode (Right Front and Right Rear)			
	W11331153	Valve, Gas (Right Rear)						

DOOR PARTS

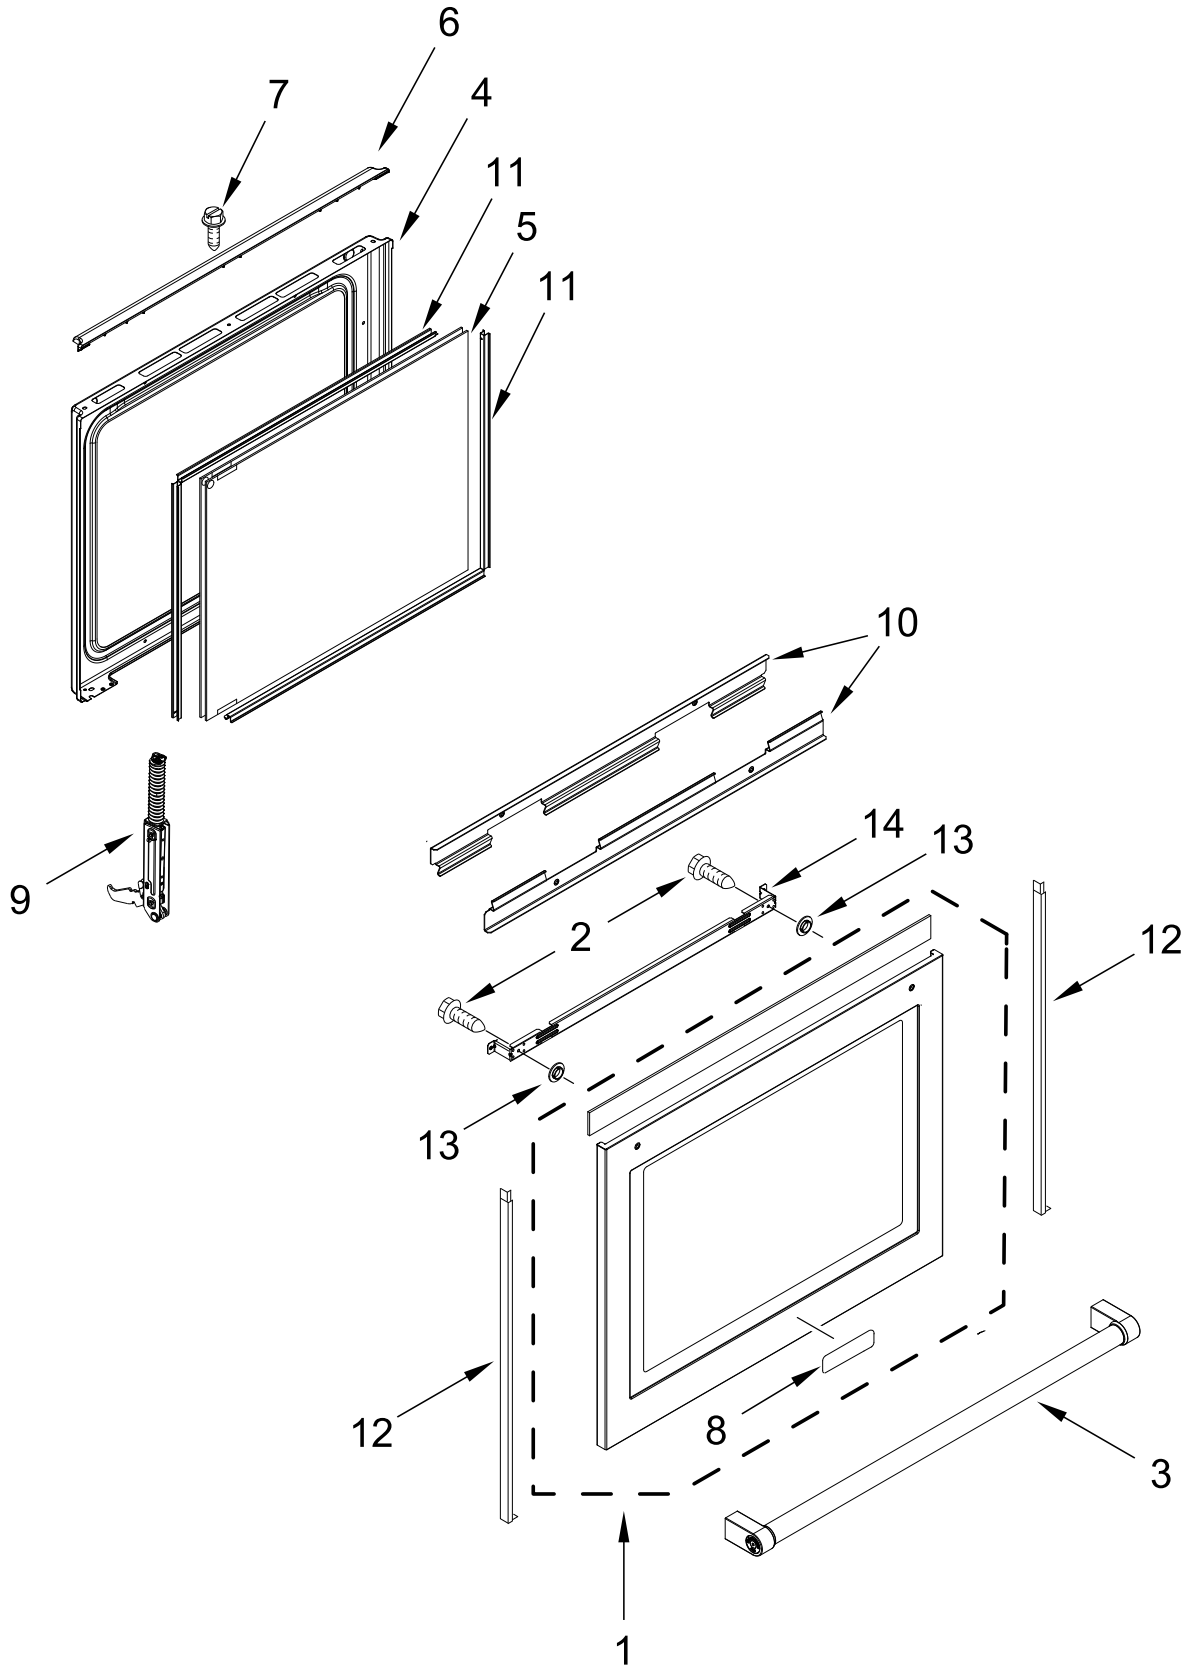

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Outer Door
	W10861703	Black Stainless
2	W11091878	Screw
3		Assembly, Door Handle
	W10551000	Stainless
4	W10826568	Liner, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5	W11223202	Glass, Inner
6	W10675397	Scoop, Door
7	9780274	Screw
8	W10518672	Badge
9	W10885519	Hinge, Door (Active)
10	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W11379948	Glass Spacer
12	W10813139	Rail, Vertical Support
13	W10319024	Washer, Door
14	W10541911	Bracket, Glass Upper Handle

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front
	W11449715	Black Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318026	Bracket, Mounting

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit and Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10423113RPKit	Oven Cleaning
	W10432019	Alt Cleaning Kit
	W10205524	Split Oven Rack
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting