


**KitchenAid®**

**30" DUAL-FUEL FREESTANDING RANGE**

**MODELS:**

KFDC500JIB01 (Ink Blue)


# BURNER BOX PARTS

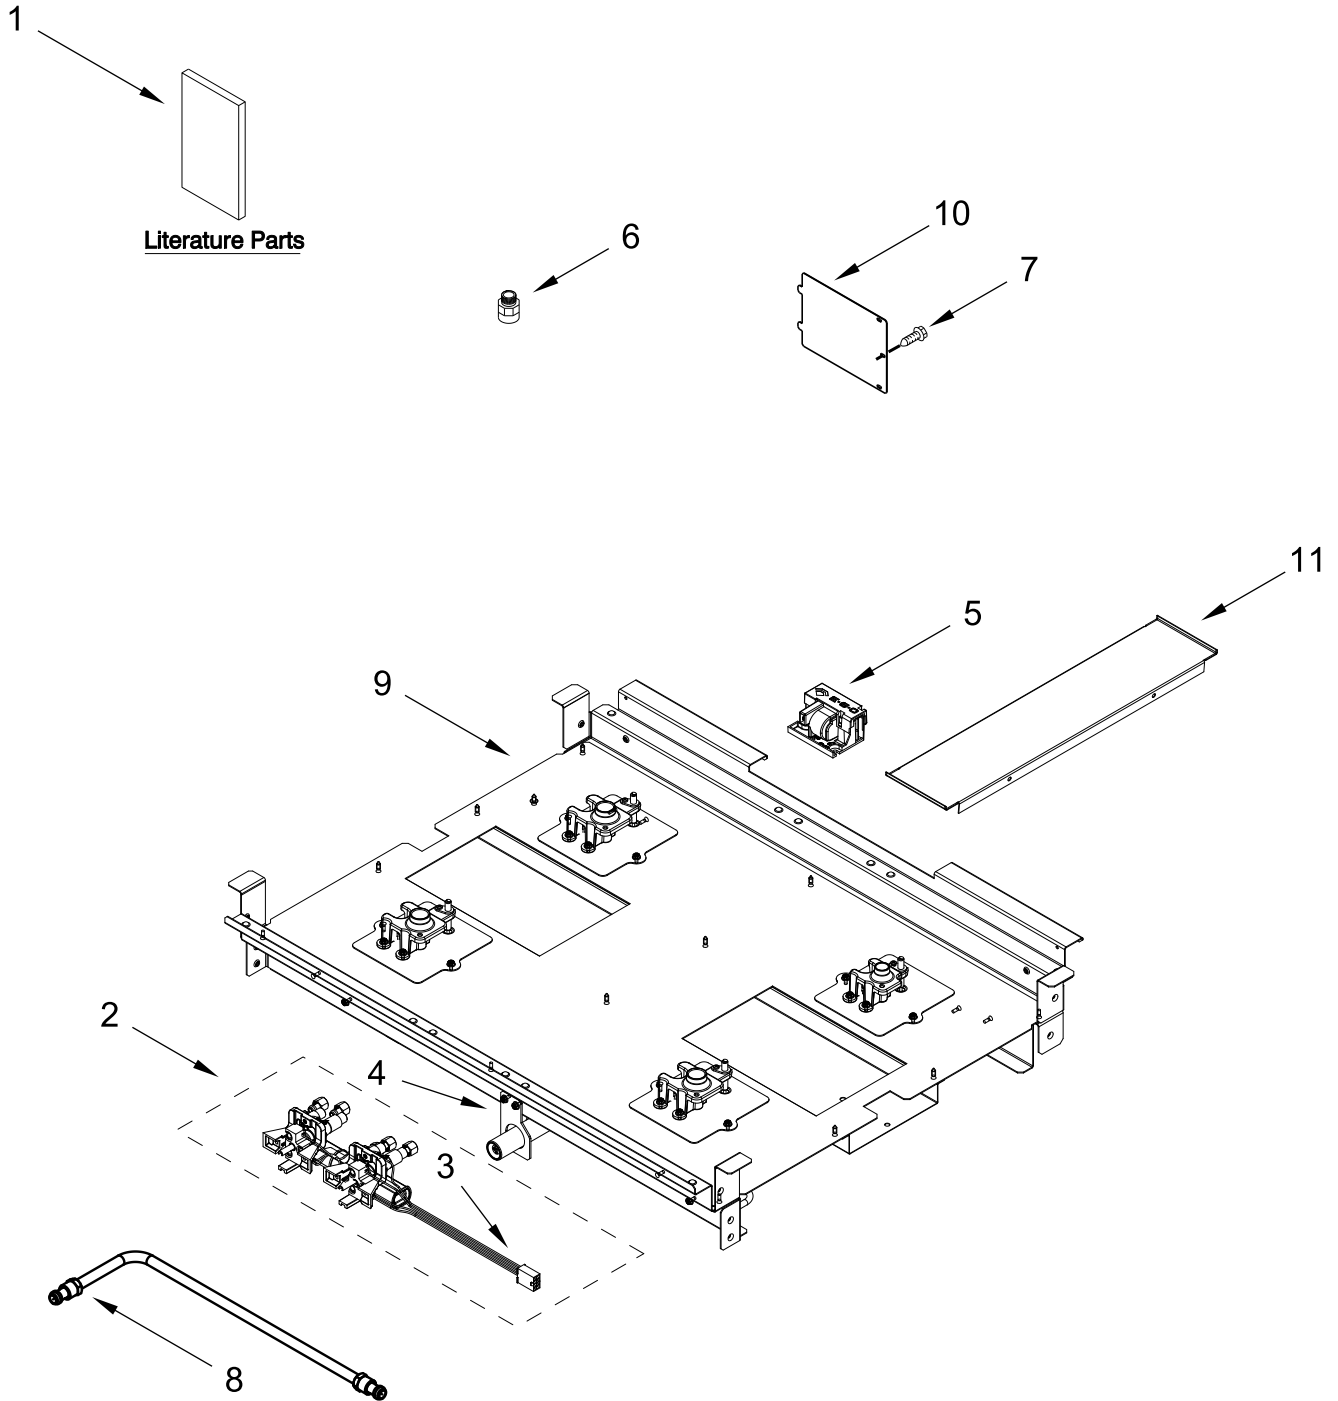

# BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10892994	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114331	Guide, Use And Care			(Left Front, Left Rear)	11	W11121361	Filler, Cooktop
	W11114334	Instructions, Installation		W10892997	Assembly, Valve Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11184759	Guide, Internet Connectivity			(Right Front, Right Rear)		W11200301	Harness, Main (30")
	W11202391	Diagram, Wiring (Cooktop)					W11200328	Harness, Cooktop
	W11202385	Diagram, Wiring (Oven)	3	W10903728	Switch, Harness		W10780278	Harness, Door Lock
	W11202289	Sheet, Tech	4	W11121194	Bracket, Manifold		W11200325	Harness, Communication
	W11114332	Guide, Quick Start	5	W11121317	Module, Spark		W11242785	Harness, WIFI
			6	4453116	Adapter, Male		W11212216	Cord, Power
			7	7101P426-60	Screw		9759877	Retainer, Strain Relief
			8	W10892281	Tube, Manifold Supply (Left)		W10253333	Bracket, Anti-Tip
				W10892292	Tube, Manifold Supply (Right)		7101P485-60	Screw, Anti-Tip Kit
			9		Box, Burner (Not Serviced)		W11238042	Kit, LP Conversion


# COOKTOP, BURNER AND GRATE PARTS

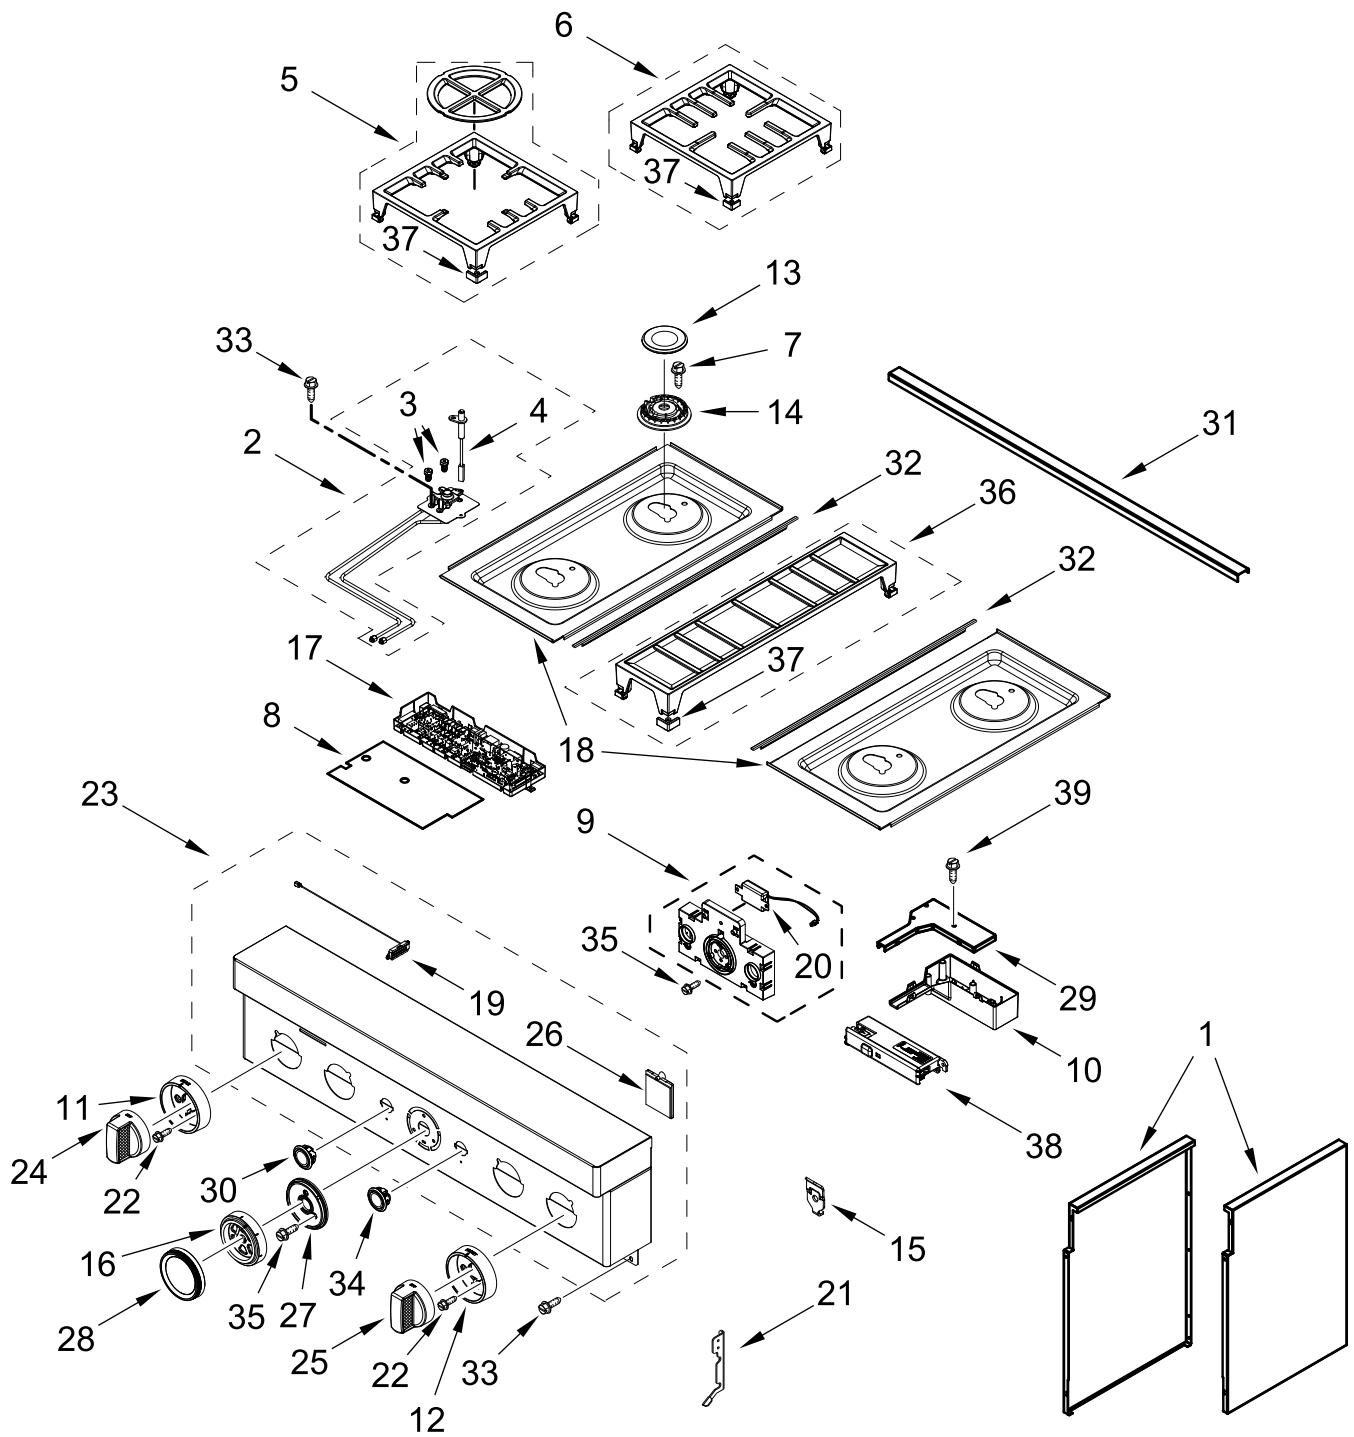

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate	20	W10568405	Assembly, Speaker
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892484	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
	W10892479	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W10892735	Assembly, Orifice Holder (Right Rear)	9	W11436334	Interface, User	23	W10877949	Panel, Console
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Single
	W10892419	Orifice, Main (15K) (Left Rear)	11	W10883433	Bezel (Rear Burners)		W10912166	Stainless Knob, Dual
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	25	W10883172	Stainless
	W10892438	Orifice, Simmer (5K) (Right Rear)	13		Cap, Burner	26	W10896366	Assembly, Light Pipe
4	W11238757	Igniter (Left Front, Right Front)		W11121389	Black (Set Of 4)	27		Bezel, Oven
	W10892340	Igniter (Left Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	28	W10913810	Stainless Knob, Oven Temperature
	W11114379	Igniter (Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)		W11429269	Stainless
				W10891978	Spreader, Flame (AUX) (Right Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11241511	Button Assembly, Oven Light
			16		Knob, Oven Mode	31	W11156414	Trim, Island
				W11249667	Stainless	32		Trim, T-Strip
			17	W11100279	Manager, Appliance (Powermax)		W10271524	Black
			18		Panel, Cooktop	33	7101P426-60	Screw
				W11038235	Black (Left)	34	W11241510	Button Assembly, Oven Start
				W11038245	Black (Right)	35	3400814	Screw
						36	W11291178	Kit, Grate Filler
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module
						39	7101P624-60	Screw


# CHASSIS PARTS

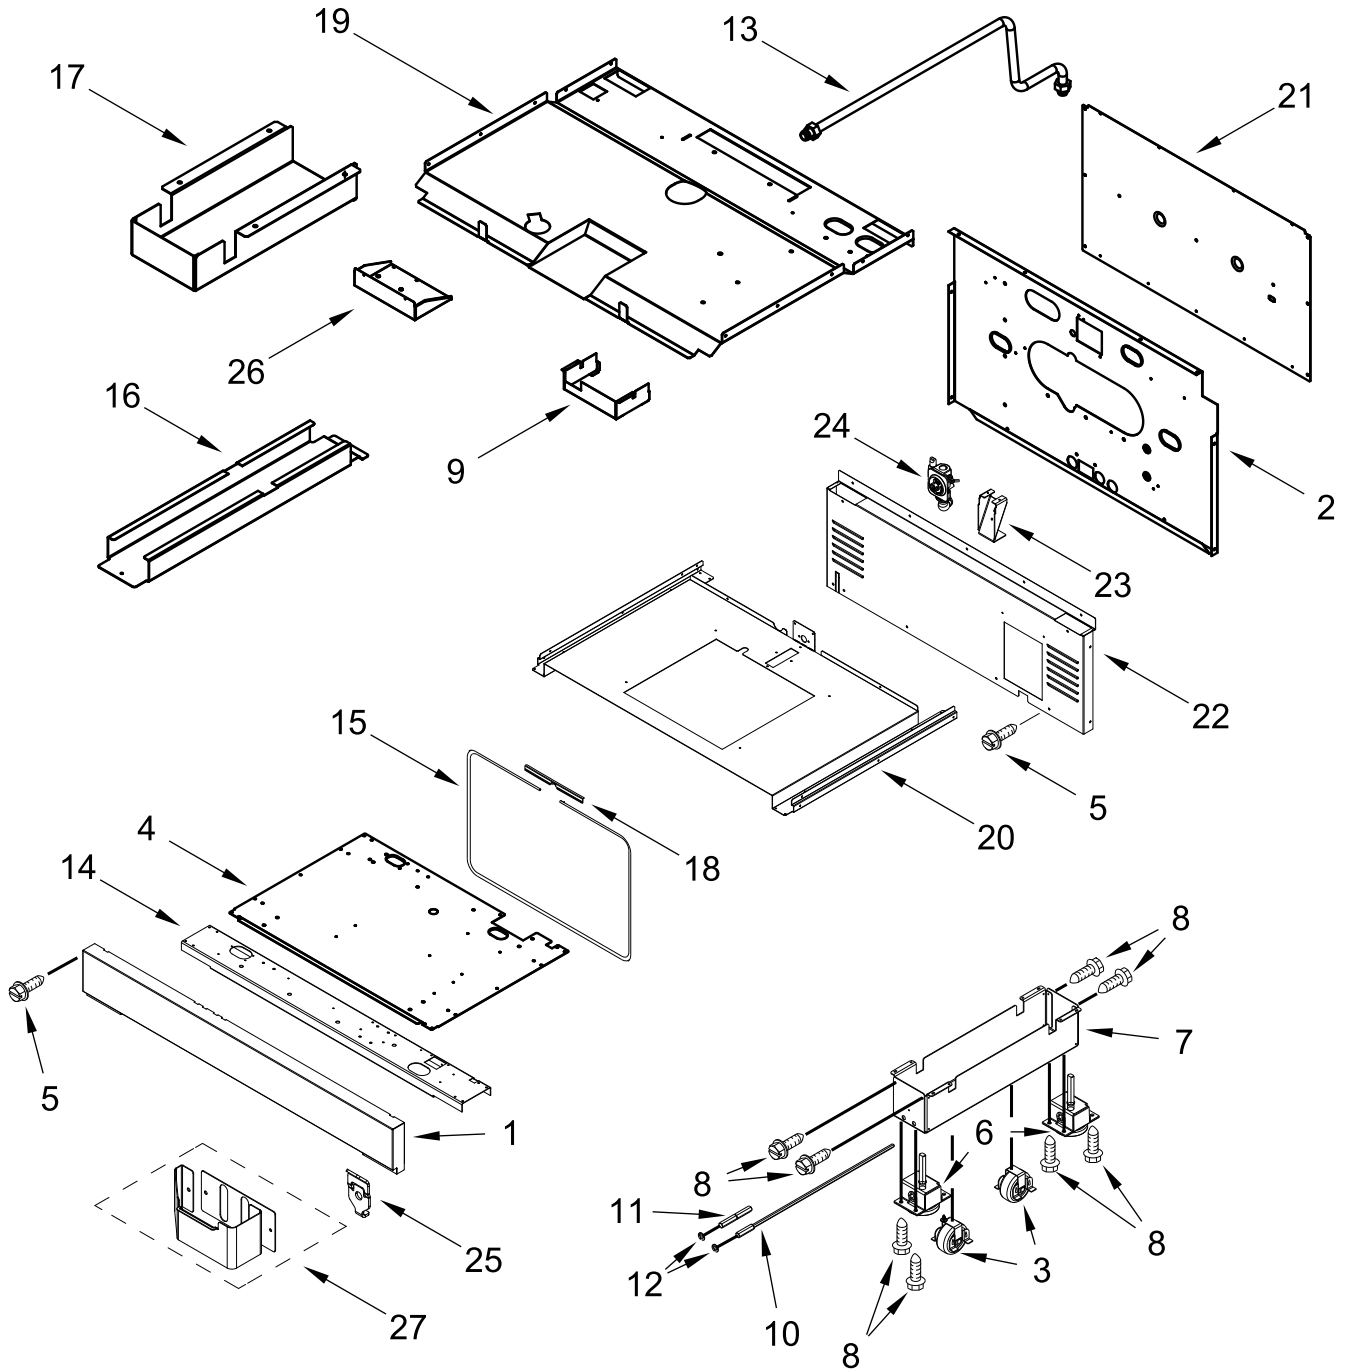

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394777	Kickplate	12	489504	E-Ring	22	W11034134	Panel, Back Bottom
2	W11324989	Back, Chassis	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	14	W11087491	Support, Channel	24	W10449140	Regulator, Pressure
4	W11109583	Duct, Bottom (30")	15	W11115328	Gasket, Oven (30")	25	W11036559	Spring Clip, Range
5	7101P426-60	Screw	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
8	4449743	Screw	19	W11324986	Top, Chassis			
9	W11369237	Cabinet, Appliance Manager	20	W11040802	Chassis, Bottom			
10	W10115869	Shaft, Long	21	W11103334	Panel, Back Top			
11	W10115793	Shaft, Short						


# OVEN PARTS

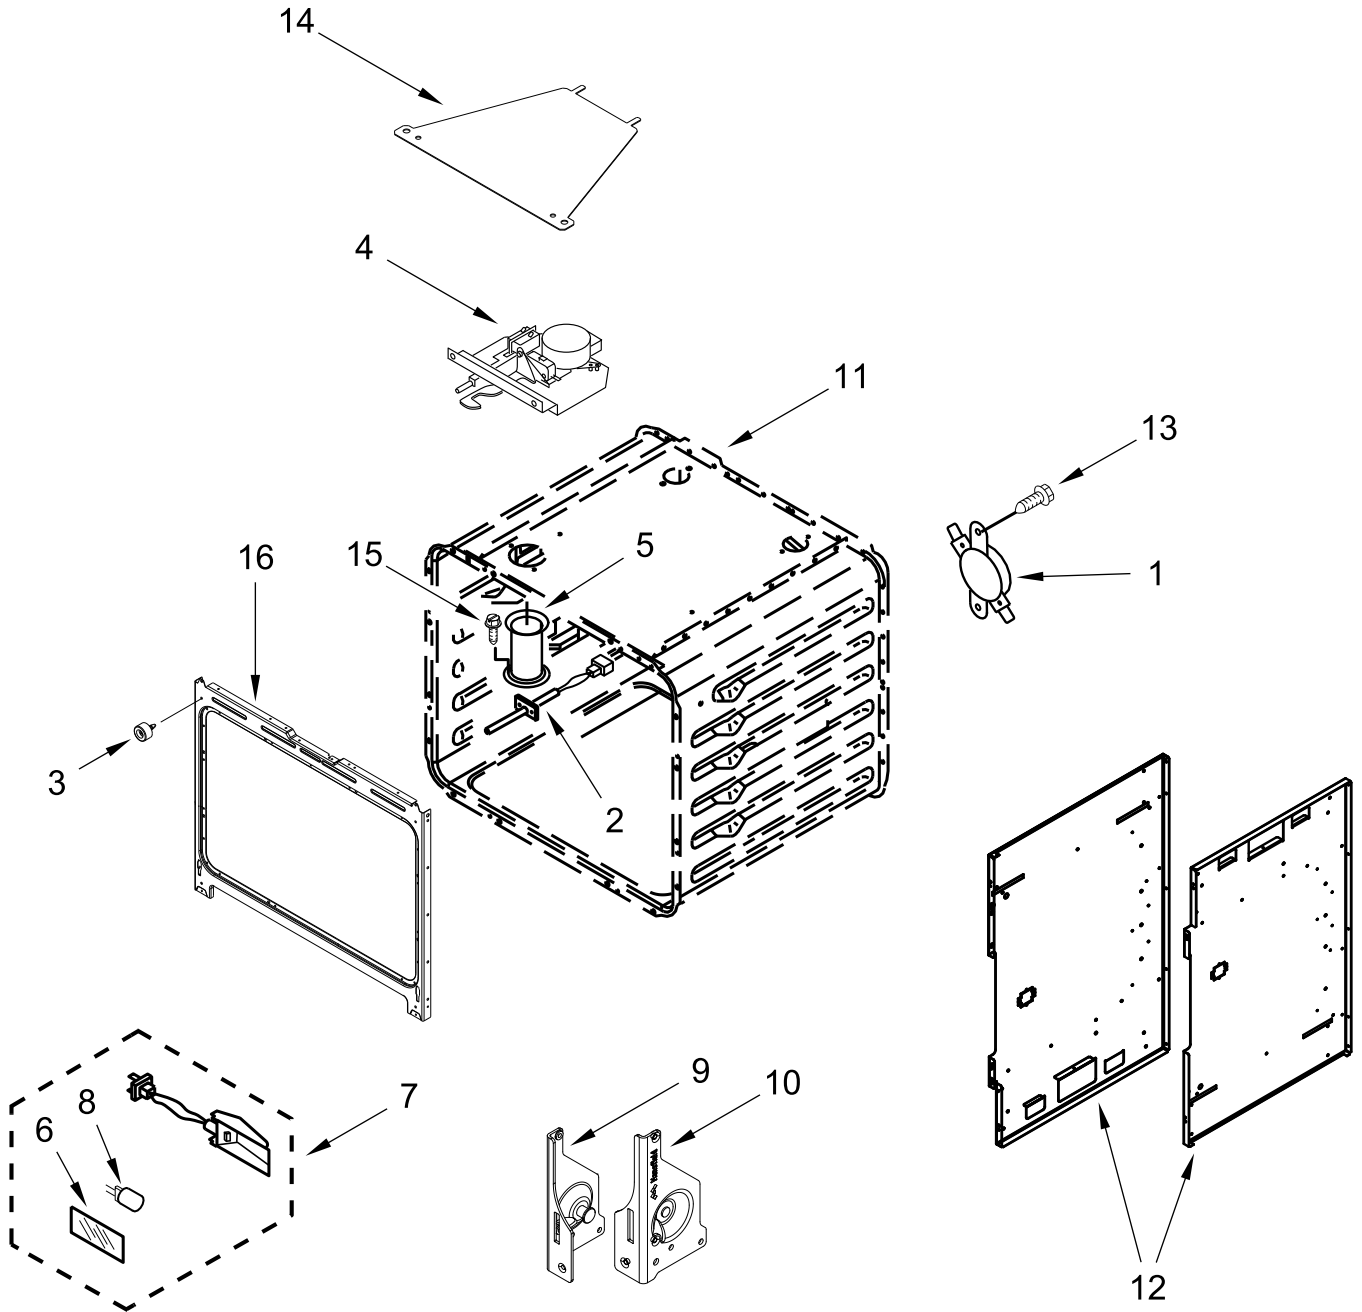

# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor				16	W11192755	Frame, Front
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)	W10282810		Insulation, Wrap, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)	W10282818		Insulation, Back, 30"
6	W10169756	Lens, Light	13	7101P426-60	Screw	3400968		Nut
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


# VENTING PARTS

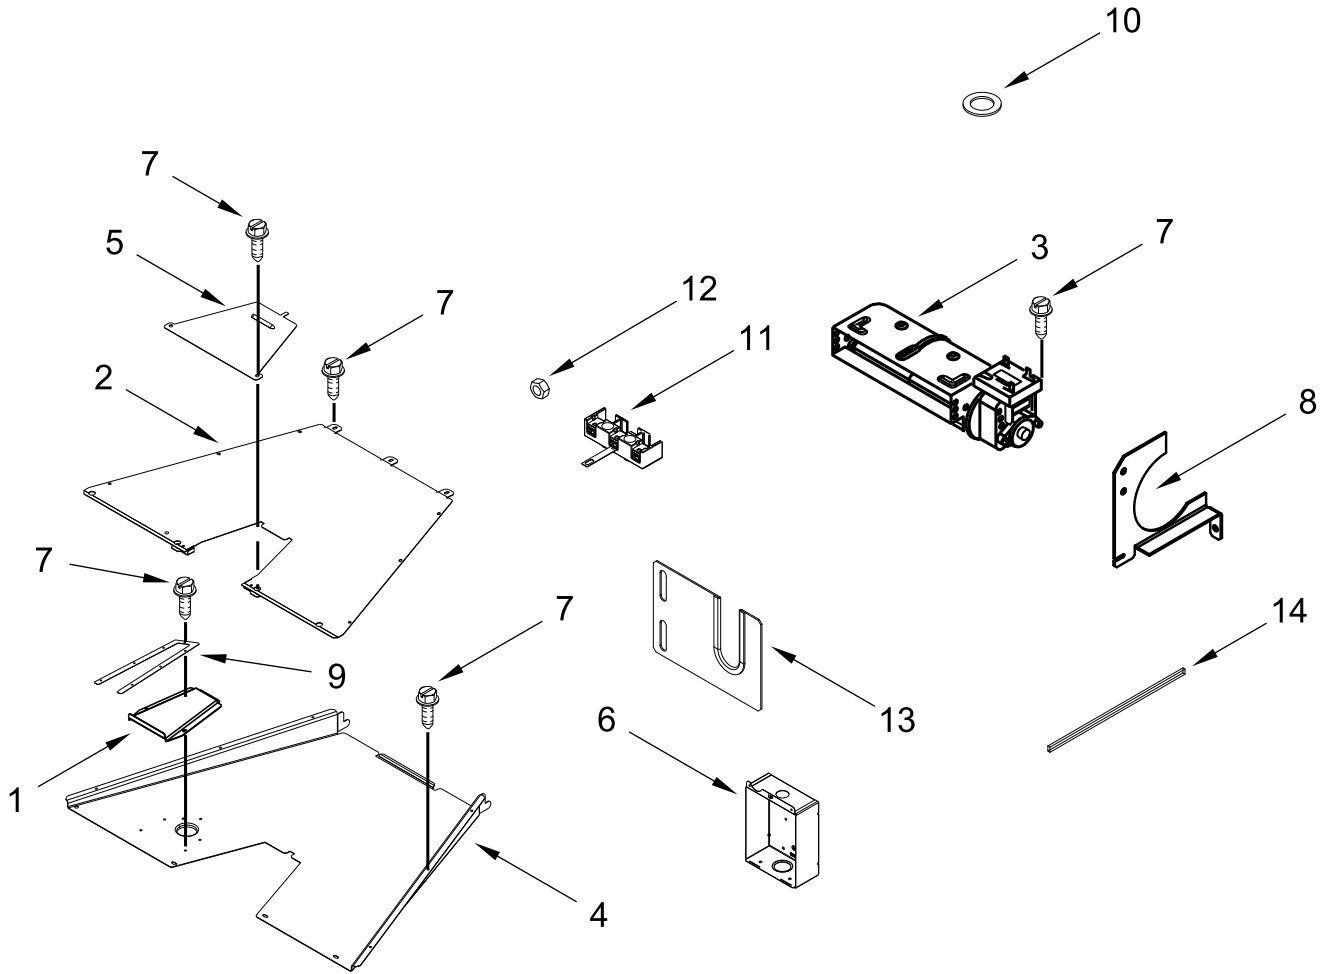

# VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


# OVEN DOOR PARTS

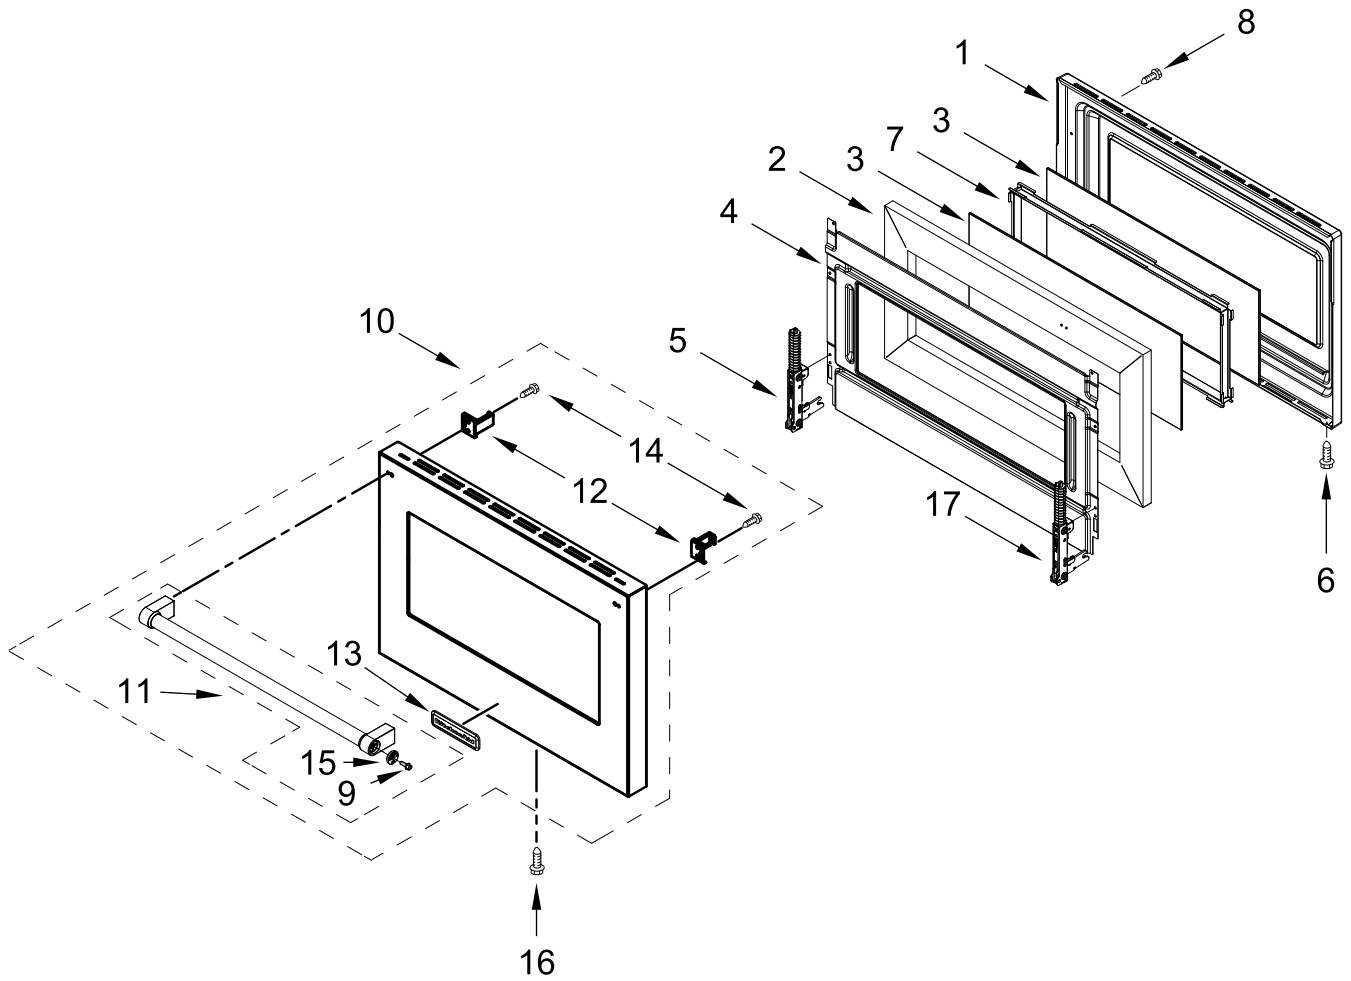

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	13	W10518672	Badge
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	14	W10276043	Screw
3	W11184409	Glass, Inner	9	W10656499	Screw	15	W11361074	Medallion, Handle
4	W11194821	Retainer, Glass	10	W11389285	Assembly, Outer Door (Includes Handle)	16	W10162096	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	17	W11390124	Hinge, Dual (Right)
6	W10607120	Screw	12	W11197830	Bracket, Handle			

# INTERNAL OVEN PARTS

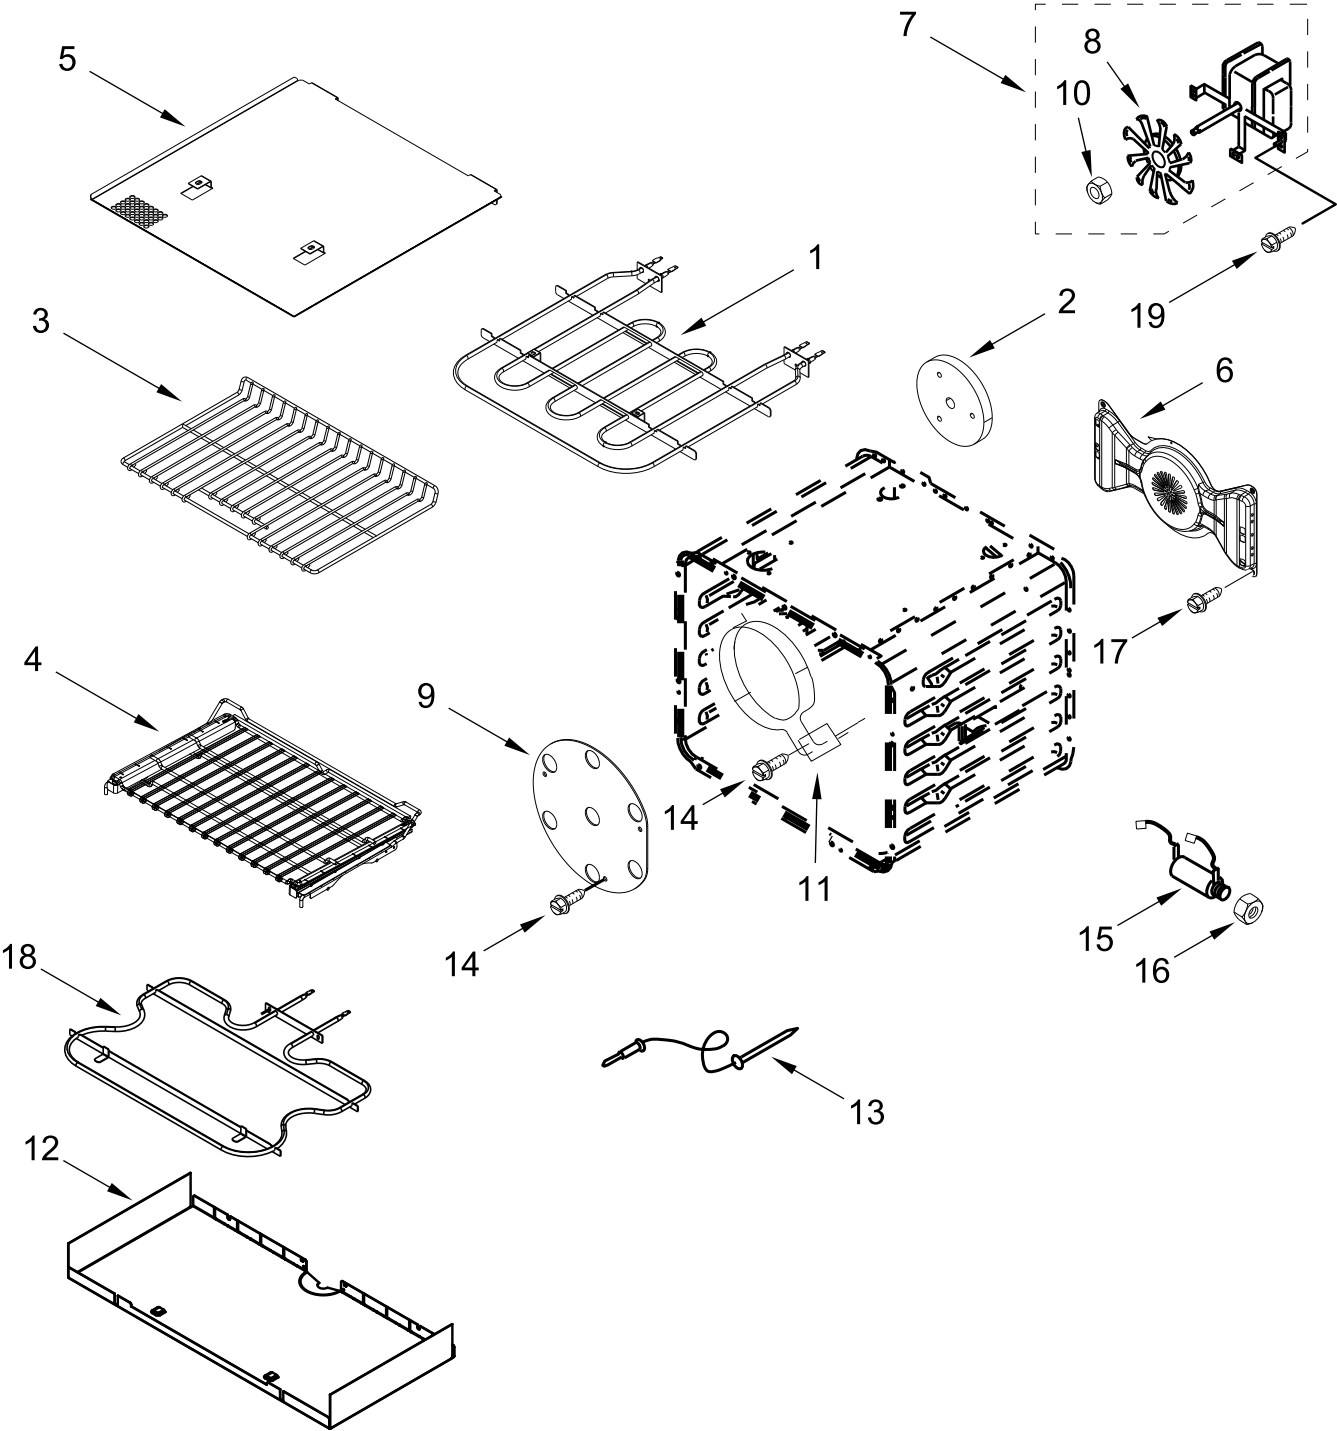

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
3	W10570887	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11108461	Rack, Oven (Sliding)	12	W11109421	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	W11033111	Nut, Locking			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude  Medallion, Handle
	W11368841SI	Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue